ADDM@RE

INSTALLATION MANUAL

Magnetic Door/Window Sensor

Model: EMAG


1. FEATURES

Suitable for fitting to doors, windows and any object that opens and closes.

The Window/door sensor transmits a signal to the control panel/ siren when 'contact' is broken between the transmitter and the magnet.

Transmits a low battery signal to the ERA alarm control panel.

2. GET TO KNOW YOUR PRODUCT

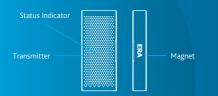

3. LED INDICATION

Flashes once: Door/window opened, transmitter sends the signal to the control panel/ siren.

Flashes every 3 seconds: Low battery indication (immediate battery change recommended


4. PCB LAYOUT



5. INSTALLATION

- Carefully remove the activation strip from the battery compartment.
- Remove the backing paper from one side of each self-adhesive double-sided strip. Fix one strip to the back of the magnet and one to the back of the transmitter.
- Peel off the other side of each adhesive strip. Mount the magnet on the door and the transmitter on the door frame, with less than a 1cm separation between the two.
- 4 When opening the door a small red indicator lights up briefly, this indicates that the transmitter has sent a signal to the control panel.

Note: Do not pair the window/door sensor to the alarm by using the button on the back. Using the button will pair sensor in 24hour mode.

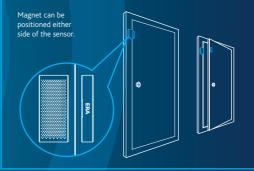

6. SPECIFICATION

Power Supply	DC 3V Lithium Batteries (CR2032) x 2
Static Current:	< 5uA
Alarm Current:	< 9mA
Transmitting Distance:	<80m (in open area)
Radio Frequency:	433 MHz (75±KHz)
Housing Material:	ABS Plastic
Operations Condition:	Temperature: 0°C ~ +55°C
	Relative Humidity: <80% (non-condensing)
Sensor Dimensions	71 x 31.5 x 15mm (L x W x H)
Probe Dimensions	71 x 12.5 x 15mm (L x W x H)

ERA Home Security Ltd Valiant Way, Wolverhampton, West Midlands, WV9 5GB.

West Midlands, WV9 5GB. Email: support@erahomesecurity.com Customer Helpline: 0345 257 2500

